



### Talon 1000X Installation Instructions

We have tried to cover every detail of this installation as thoroughly as possible, but in the event that we missed something, please let us know. We really appreciate your business, and we hold customer satisfaction with high regard. Do not hesitate to give me a call if you need clarification or assistance with anything at all throughout your installation process.

-Jared Doster  
936-581-2948

#### Liability Statement

Texas Tough Customs LLC's products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by Texas Tough Customs LLC and is not recommended. Texas Tough Customs LLC's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact Texas Tough Customs LLC to verify that they will work together.

Although Texas Tough Customs LLC has hundreds of satisfied customers, users should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. Texas Tough Customs LLC urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing Texas Tough Customs LLC's products, user agrees that should damages occur, Texas Tough Customs LLC will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. Texas Tough Customs LLC, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from Texas Tough Customs LLC. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

Texas Tough Customs LLC will warranty only parts provided by Texas Tough Customs LLC. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by Texas Tough Customs LLC. Texas Tough Customs LLC parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.


The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold Texas Tough Customs LLC harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold Texas Tough Customs LLC harmless from any violation thereof.

## Stock Front Control Arms Disassembly:

**Remove A-Arms:** Keep all components removed from machine. Driver side shown.

-Loosen the jam nuts on both the inner and outer tie rod ends.

- Remove Tie Rod End from Knuckle.

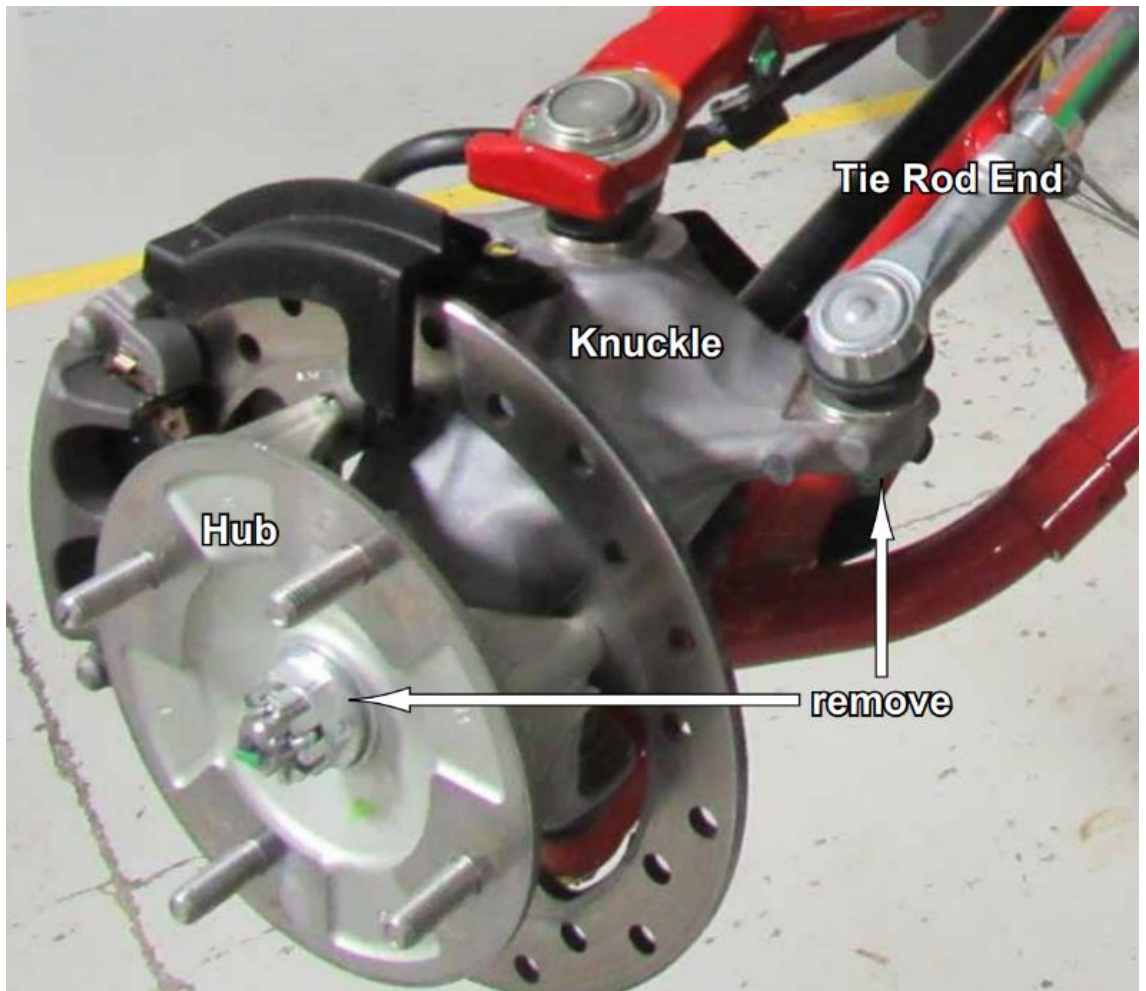


- Unfasten and remove Brake Line from Upper A-Arm.

- Remove Upper and Lower Arm from Knuckle.

- Remove Shock from Upper Arm.

- Remove A-Arms from Frame.

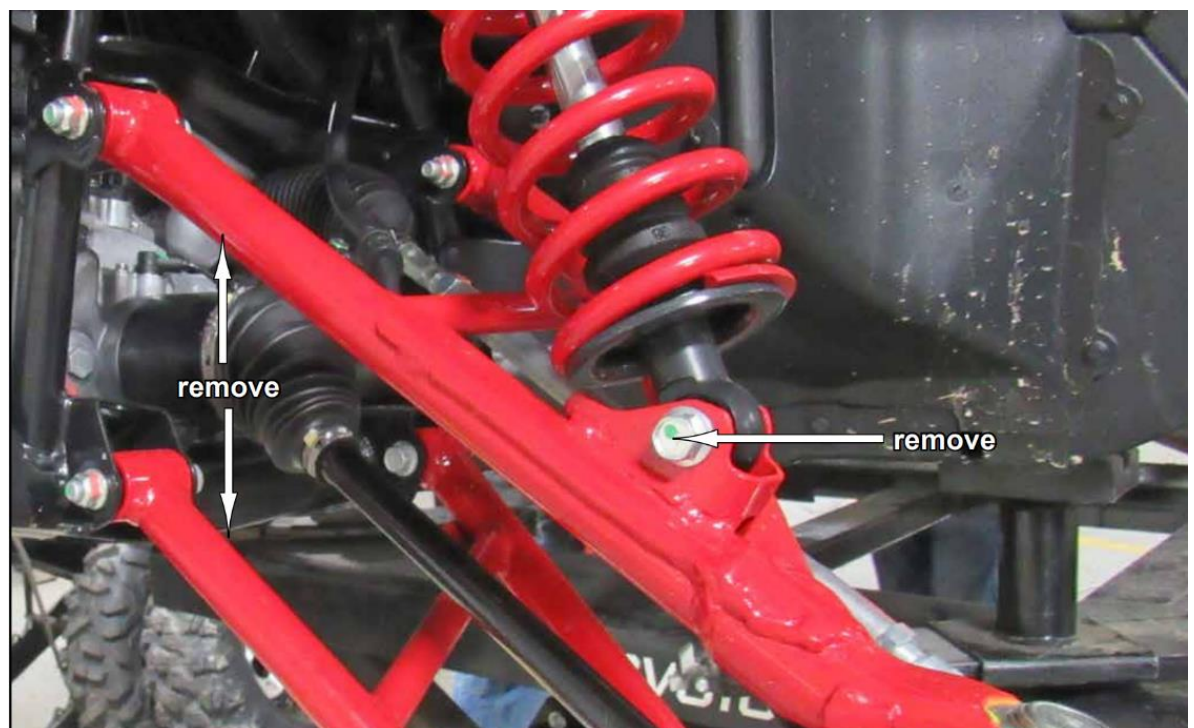


If you are running out TTC 3" LT kit then you can remove the stock front axles and replace them with the extended R length axles of your choice.

Repeat steps for Passenger Side.

### **TTC Talon Front Control Arms and Tie Rod Installation:**

**Step 1. (Assemble and Install TTC HD Tie Rods)** Our Talon X kits come with 3 different tie rod options depending on what options you selected when you ordered your kit.


1. If you are running our **Forward Only Arms** and chose to run your stock tie rods, you will unscrew the middle section of the stock tie rod by 2.75 turns. This will be a pretty close place to start for the toe. Continue on with the installation and save final toe adjustment for last.
2. If you are running our **3" Lift Arms** and chose to run your stock tie rods, you will unscrew the middle section of the stock tie rod by 1.25 turns. This will be a pretty close place to start for the toe. Continue on with the installation and save final toe adjustment for last.
3. If you are running our **3" LT Arms** and did not upgrade to our Stage 2 Heim Style tie rods, you will start by disassembling the stock tie rods and removing the stock tie rod bar section. Screw both the inner and outer tie rod jam nuts all the way down on to the tie rods. Next, screw the stock outer tie rod all the way in to the new TTC HD Tie Rod bar, then unscrew it 4 turns. Now, screw the tie rod assembly onto the inner tie rod all the way up to the jam nut. This will be a pretty close place to start for the toe. Continue on with the installation and save final toe adjustment for last.

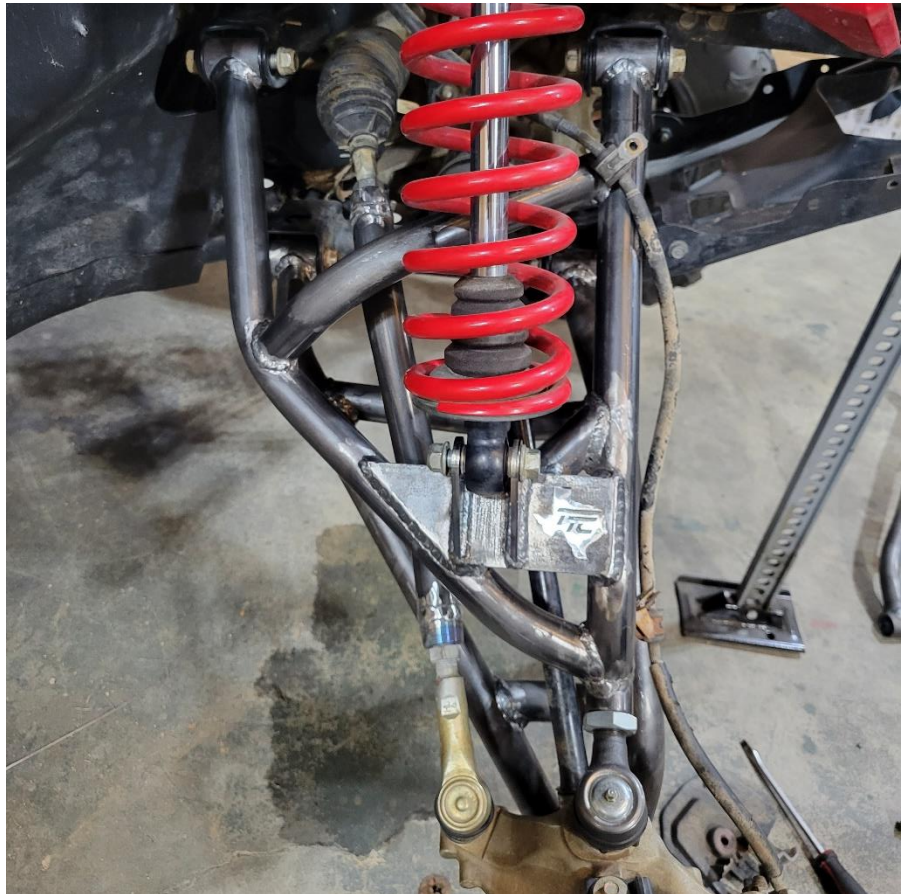

4. If you are running our **Stage 2 Heim Style Tie Rods** then you will start by completely removing the stock tie rods from the steering rack. First you will need to remove the metal clamp holding the inner boot to the steering rack. Use a flat head screw driver and a pair of wire dykes to cut the metal clamp off. Once the clamp is removed you can pull the boot back and use a crescent wrench to unscrew the inner tie rod from the steering rack. Make sure to remove the boot from the stock inner tie rod assembly and reuse in a later step. Now you can install the inner clevis to the steering rack. Make sure to use **red lock tight** on the bolt that goes into the steering rack and make sure to clock the clevis to the rear of the machine about 10 degrees. See our HSTR Install video for more info (this video is on a Pioneer, but the process is the same). Once the clevis is installed and clocked properly, install the inner heim joint into the clevis and tighten down. Next push the stock boot onto the heim and up onto the steering rack. Once the boot is all the way on, screw the jam nut onto the heim until there is .75" of threads sticking out. Now screw the TTC tie rod bar onto this inner heim all the way to the jam nut. Make sure the outer heim joint is also screwed all the way in on the outer side of the tie rod. This will be a pretty close place to start for the toe. Continue on with the installation and save final toe adjustment for last.


**(If you are installing our "Stage 2" tie rods, you may need to run a 1/2" drill bit through the stock spindle to make clearance for the outer tie rod bolt).**

Ideally you want to line the clevis up with the hole in the hub assembly where the outer tie rod will attach. See pic below.

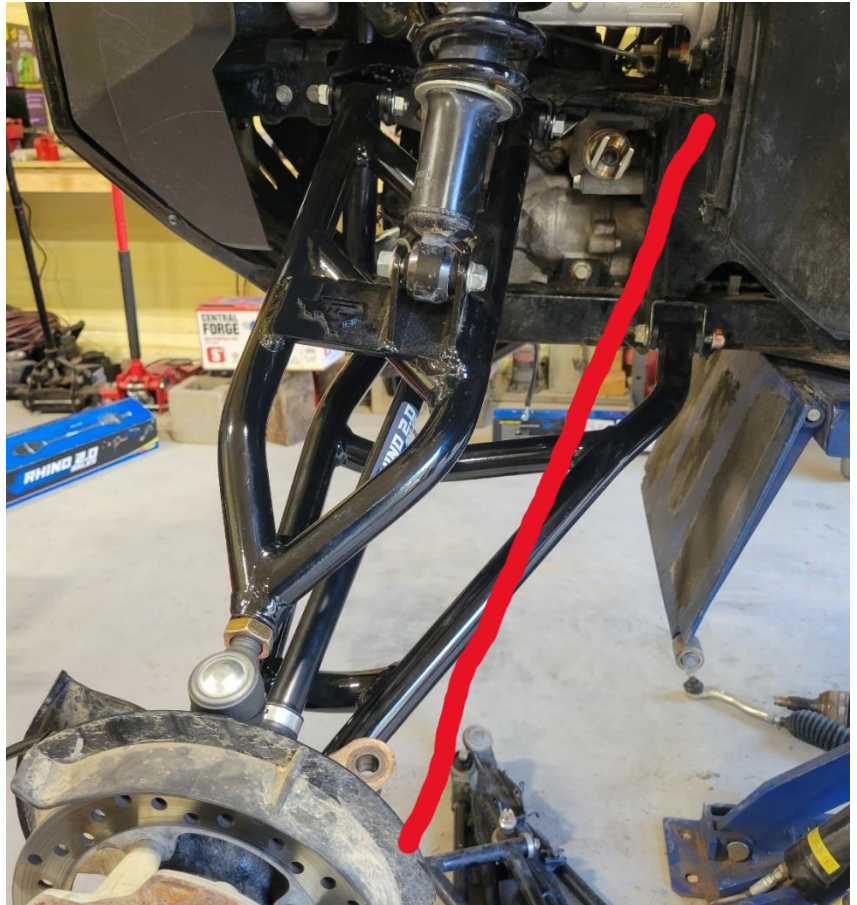



**Step 2. (Install Lower TTC Control Arm)** Locate the lower control arm for the side that you are working on and make sure that the ball joint is closer to the front of the machine to ensure you have the arm for the correct side. Install the lower control arm into the lower frame mount using the two factory 12mm bolts and nuts. Snug up the nut but do not tighten. **The inner heims should be screwed all the way into the arms then 4 turns out. (TTC 3" LT kit heims should be screwed all the way in).** If you are installing a Ball Joint Delete Kit, the 1.25" heims should be screwed all the way in then 1/2" out. (See pic below)

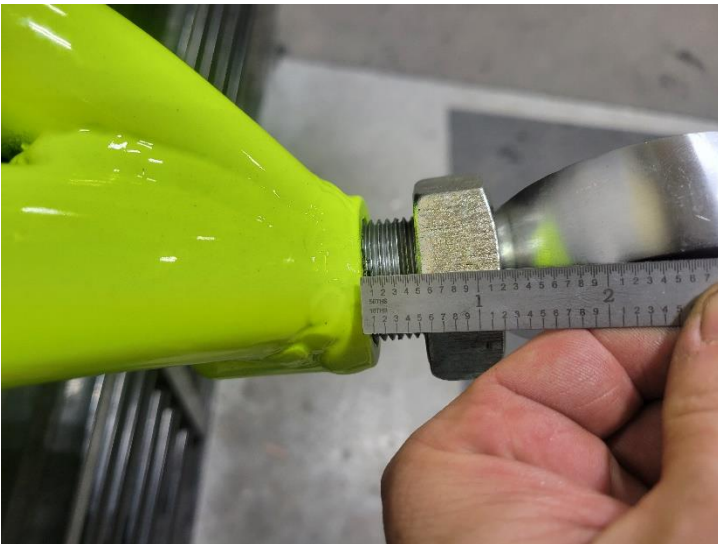

**Step 3. (Install the Hub Assembly to the Lower Ball Joint)** If you are running the TTC 3"LT kit, first install the hub assembly onto the axle, then onto the lower ball joint.

**Step 4. (Install Upper TTC Control Arm)** Locate the upper control arm for the side that you are working on and make sure that the ball joint is closer to the front of the machine and the shock mount is closer to the rear of the machine. Install the TTC upper control arm into the upper frame mount using the factory mounting hardware. Snug up the nut but do not tighten. **The inner heims should be screwed all the way into the arms then 4 turns out. (TTC 3" LT kit heims should be screwed all the way in).**

Your front upper control arms use Moog part number (**ES437L**) as the upper ball joints and requires the supplied spacer to be used between the castle nut and the hub assembly. If running portals, sometimes it is necessary to add another washer to ensure that the castle nut does not bottom out on the shoulder of the tapered pin before it tightens down on the hub. *(Remember, this ball joint is LEFT HAND THREAD)*. To adjust for proper camber, **start with screwing the upper ball joint all the way in, then 2 turns out**". Once you finish installation, you may need to adjust this upper ball joint either out or in to obtain desired camber depending on your shocks and other components. Only install the castle nut hand tight at this time, just in case you need to disassemble to adjust for camber.



If you are running one of our newer kits (July 2024 and newer), then you may have our new 7/8 heim style ball joint setup. If so, your upper ball joint will have a space between the hub and the heim. **The space under the heim is normal** and allows the heim to articulate. See pic below.




If you are running our heim style ball joint setup, first use a 10mm wrench to hold the pin, and tighten down the top locking nut on to the heim (**no need to over tighten**). Then insert the pin into the hub assembly and tighten the lower nut while holding the top of the pin with a 10mm wrench (**no need to over tighten**).

**Step 5. (Install Upper Control Arm Into the Hub Assembly)** Remove the cotter pin and castle nut from the Moog upper ball joint and install it into the hub assembly. Make sure to only tighten the castle nut hand tight until front installation is complete and desired camber is achieved. Do not install cotter pin at this time.

**Step 6. (Install Shock)** Install the shock onto the upper control arm.

**Step 7. (Tighten Frame Bolts)** Once everything is assembled hand tight, go ahead and fully tighten both the upper and lower frame bolts that mount the control arms to the frame.

*Repeat everything on other side....*

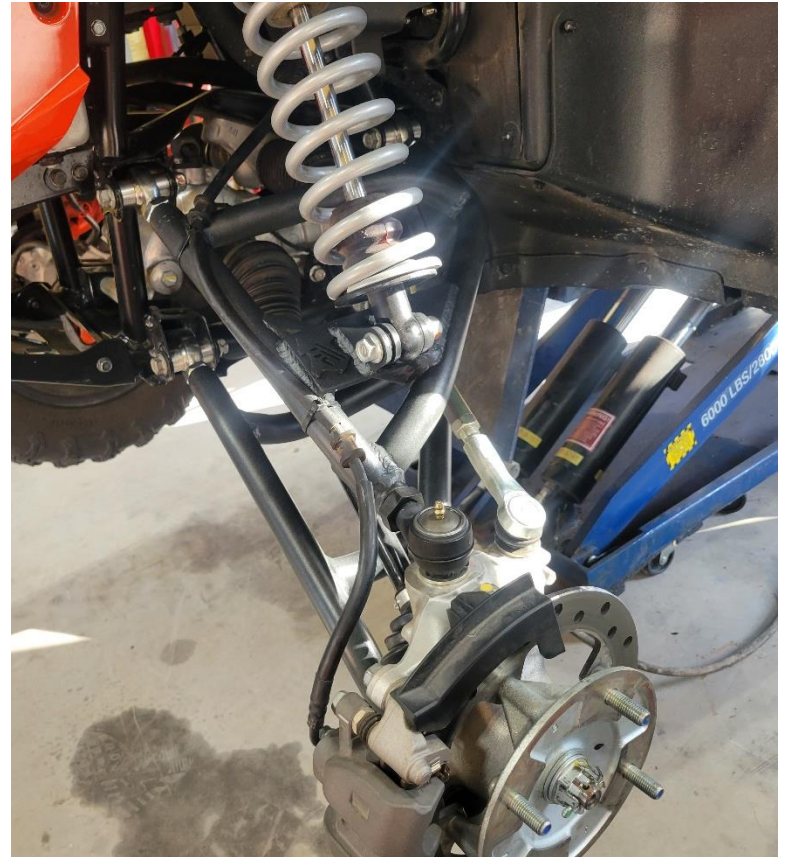

**Once both sides are complete,** re-install the tires and lower the machine to the ground. Start it up and pull it forward and back while turning the wheels back and forth to allow the shocks to settle to true ride height. Once the suspension has settled back down to normal, check to see if you have achieved the desired camber (wheels are straight up and down).

**If camber is correct,** tighten everything down and install cotter pins into castle nuts.

## Front Camber Adjustment

If the **top** of the wheel is sticking out farther than the bottom of the wheel, then you need to adjust the upper ball joint in.

If the **bottom** of the wheel is sticking out farther than the top of the wheel, then you need to adjust the upper ball joint out.

**Step 1. (Remove Wheels)** To adjust for camber correction, jack up the front of the machine and remove the wheels.

**Step 2. (Remove Upper Ball Joint From Hub Assembly)** Remove castle nut from upper ball joint and remove upper ball joint from hub assembly. Once removed, adjust the upper ball joint either in or out to achieve desired camber. *(Remember, the ball joints are **LEFT HAND THREAD**)*

**Step 3. (Re-Assemble)** Put the upper ball joint back into the hub assembly and secure castle nut hand tight.

**Step 4. (Install wheels and Re-check Camber)** Re-install wheels and start up the machine. Pull it forward and back while turning the wheels back and forth to allow the shocks to settle to true ride height. Once the suspension has settled back down to normal, check to see if you have achieved the desired camber. Repeat steps until desired camber is achieved.

**Step 5. (Tighten and Finalize)** Once desired camber is achieved, tighten all ball joint castle nuts and install all cotter pins.

## Toe Adjustment

If your wheels are pointing **outward**, you need to **loosen** the tie rods to bring the wheels straight.

If your wheel are pointing **inward**, you need to **tighten** the tie rods to bring the wheels straight.

**Step 1. (Adjust Toe)** Make sure all tie rods are screwed all the way in and the jam nuts are loose. Since one end of your tie rods are right hand thread and the other is left hand thread, this allows you to grab the HD tie rod itself and either tighten or loosen it to obtain desired toe adjustment, but it may be easier to remove outer tie rod from the hub assembly and adjust the outer tie rod itself. Check toe by measuring the distance between the wheels in front of the ball joint and comparing it to the distance between the wheels behind the ball joint.

**Step 2. (Tighten)** Once desired toe is reached, tighten the jam nuts and make sure to check them frequently.



## **TTC X Rear Control Arms Installation:**

Remove Stock Lower Control arms and brake lines and maintain all stock hardware.

Install new extended brake lines.


The front heim joint should be screwed all the way in. Make sure to tighten the jam nut before installing the arm on the machine.




Using the stock hardware, install your new TTC Arms onto the machine and rear hub assembly.

Secure new brake lines to lower control arm with zip ties making sure the brake lines are not rubbing on other components.

Repeat on other side.

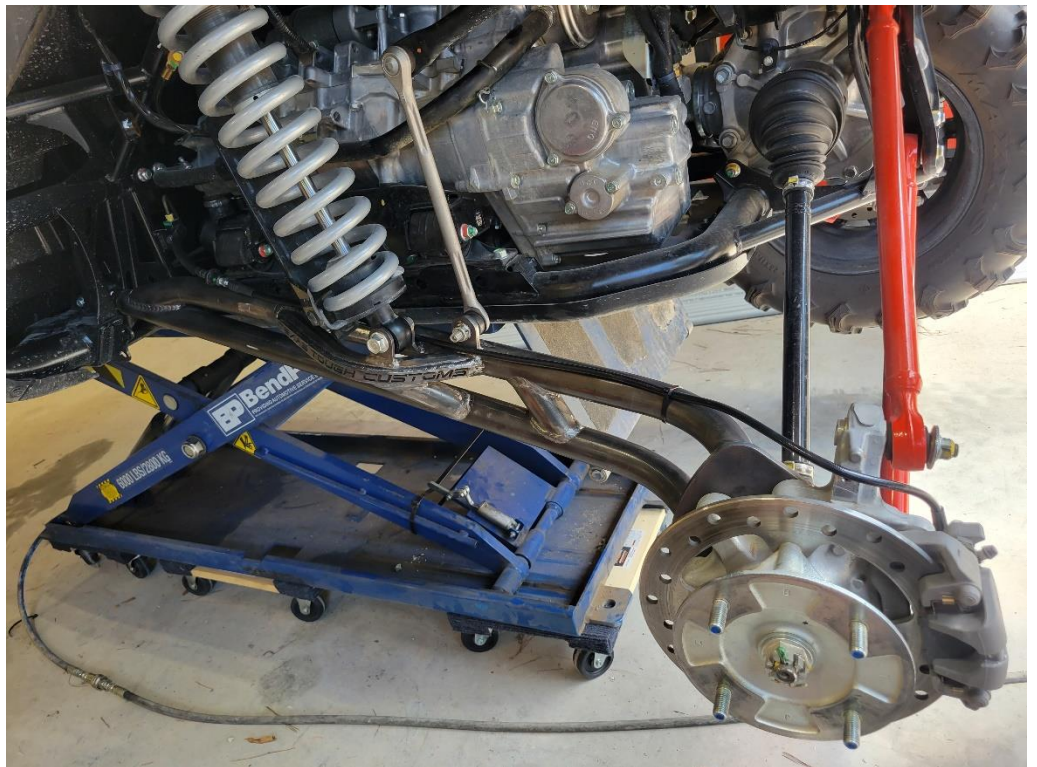


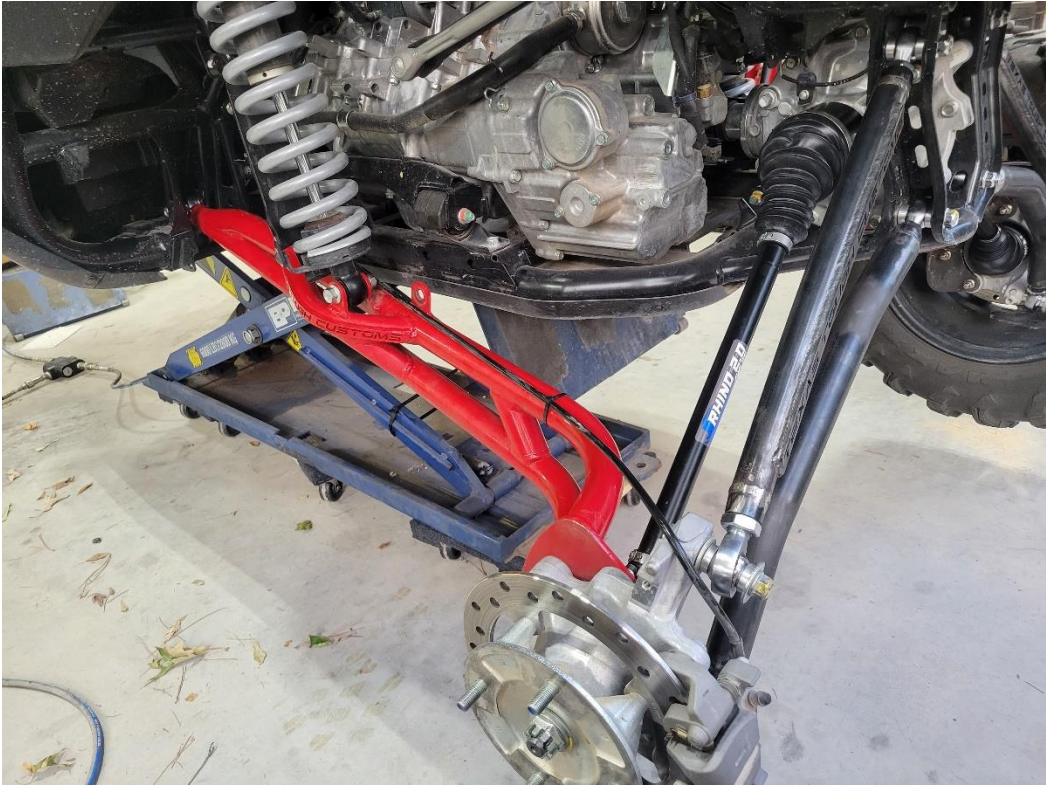

It is recommended to remove at least 1" of preload on the rear shocks from the factory settings. This will lower the rear of the machine and help soften the rear end buck that the Talon X is known for.

The stock measurement from the bottom of the reservoir mount to the top of the tender spring is 5".



This picture shows after 1" of preload has been taken out.

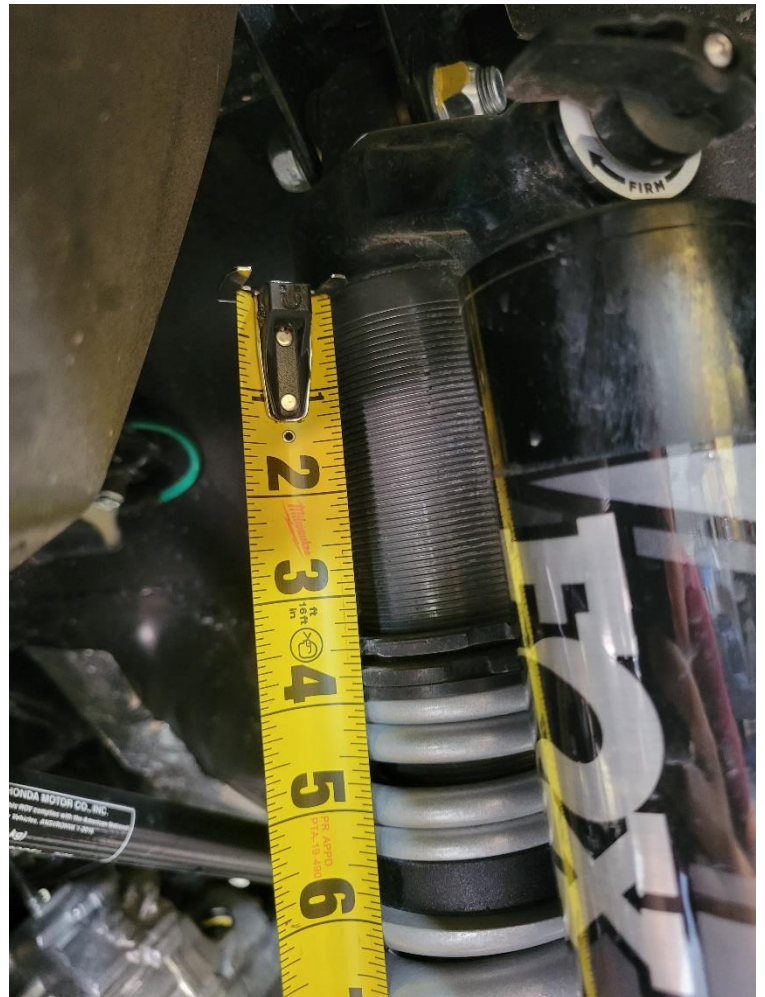

## TTC Talon X Radius Rod Installation:


Remove Stock radius rods and maintain all mounting hardware.

Use the photo below to confirm your new TTC Radius rods are at the proper length before installation.

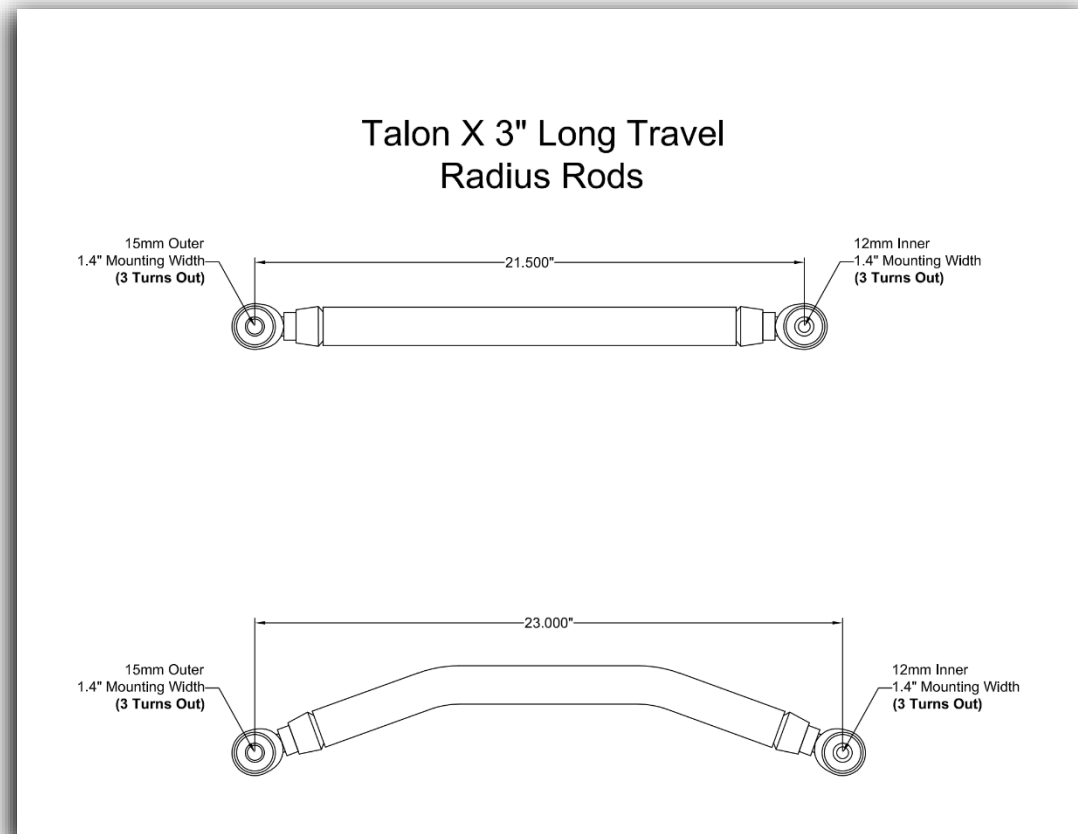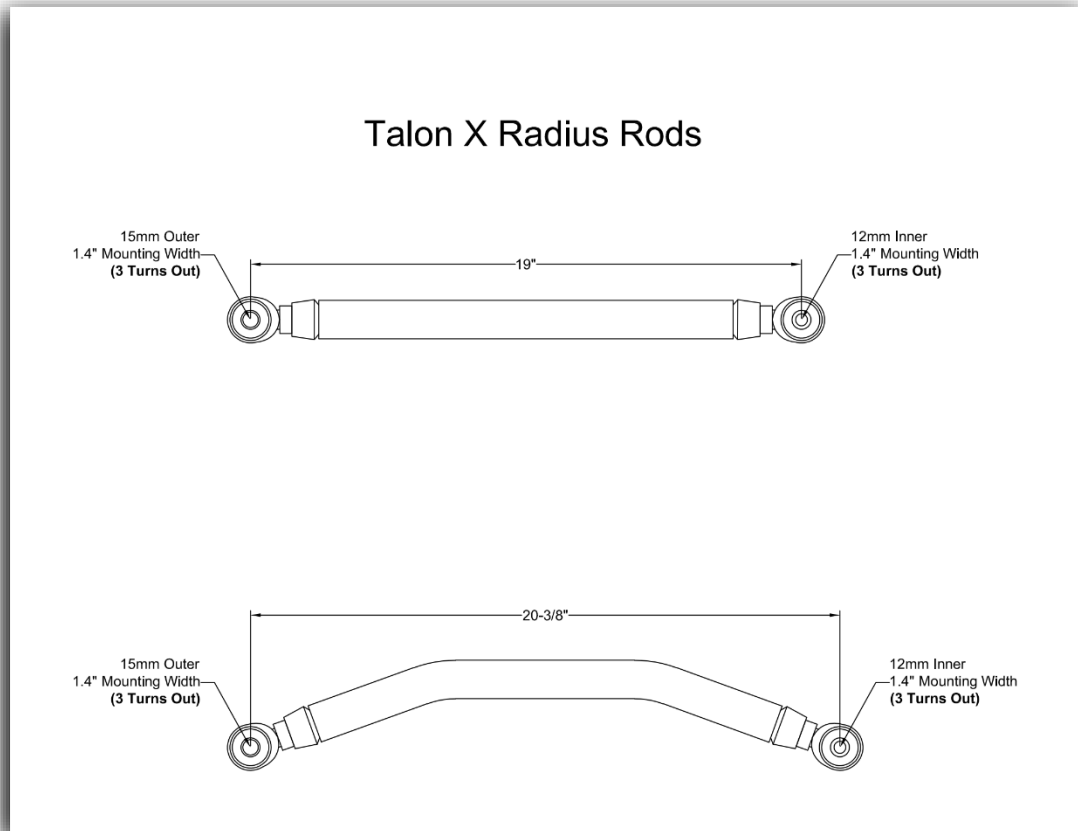

Once eye to eye dimensions are confirmed, install TTC Radius Rods onto the machine, using all factory mounting hardware.

Once installed, pull the machine forward and back to allow the suspension to settle to true ride height then double check that the rear camber and toe is where you want it. Tighten everything down and take it for a ride!

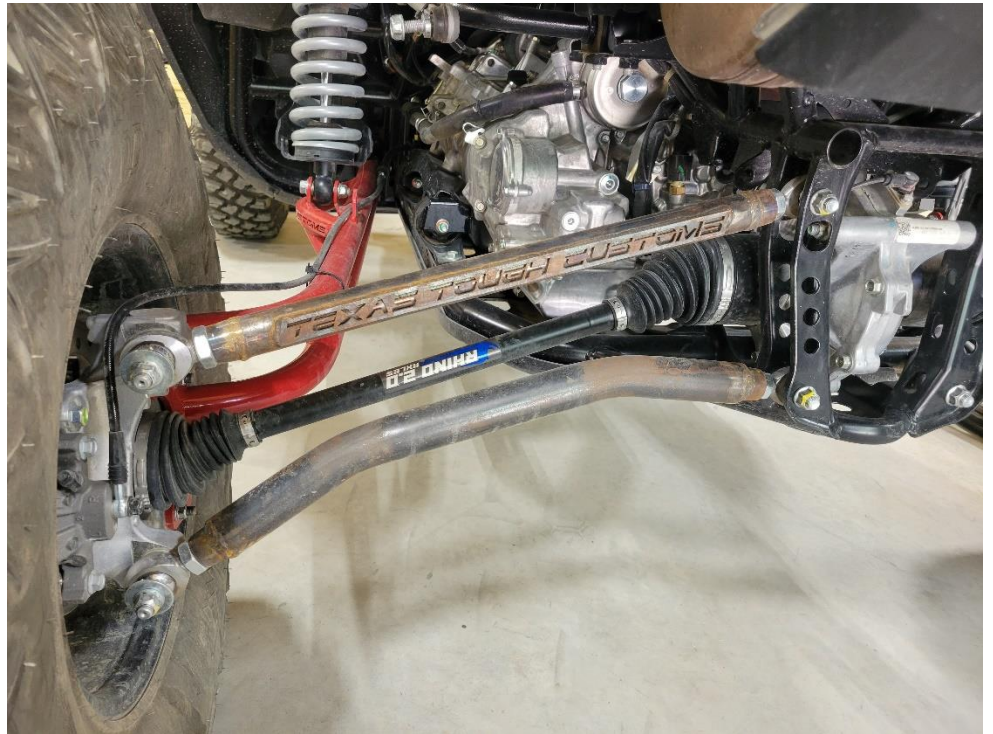

Don't hesitate to give us a call if you have any question during your installation. 936-581-2948